




WWW.LRCNAPLES.COM

Trolling Motor Mount Mounting Instructions

Gheenoe 15'4 Highsider, 13" and older Gheenoes with aluminum rub rails

Align mount flush on rails & use ¼" drill bit to drill (4) holes for screws. Align and drill closer to the center of the rails to provide enough space underneath to thread on the provided nuts. Use of Loctite is recommended.

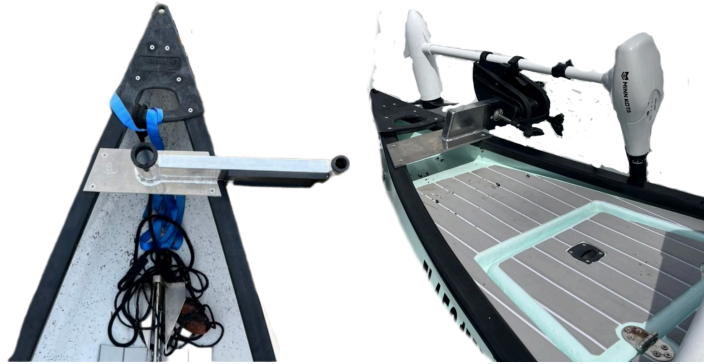

Gheenoe Classic/LT10/LT25 etc with large nose caps on bow

Align mount on nose cap as close to the edge as possible while centering the screw hole in the center of the rub rail and use a ¼" drill bit to drill (4) holes for provided screws. Use of Loctite is recommended. If a trolling motor mount with an integrated rod holder was purchased for use with a flat nose cap, a 1.5" hole saw will need to be utilized and aligned with the rod holder to provide space for the rod to fit through.



Warning always check trolling motor bracket clamp screws for tightness / damage prior to trailering, after trailering, and use on water to prevent bracket from loosening and falling off of the aluminum mount. Remember, the only thing holding the trolling motor onto the trolling motor mount is pressure from the clamp screws. Removing the trolling motor during trailering is recommended. LRC is not responsible for lost or damaged trolling motors.